

RDC Floor Top Carpet Installation



The Floor Top Carpet installation will be easier if the RDC if it is not fully inflated.

- 1 Starting from one end of the floor, remove 2 adjacent bolts from the floor handle loops.
- 2 Install the Carpet between the handle loops and the floor edge using the same bolts, nuts and washers. Do Not Tighten at this time.
- 3 Remove 2 adjacent bolts from the floor handle loops on the opposite side and install the Carpet as before.
- 4 Continue alternating from side to side for the length of the floor.
- 5 Tighten all of the nuts and bolts once the installation has been completed.
- 6 Finishing inflating the RDC.

Recommended Tools

- 7/16" ratchet socket with extension or open end wrench
- #3 Philips screw driver

The Floor Top Carpet should be considered to be a permanent assembly that does not need to be removed between deployments. It will easily roll up with the RDC when deflating and fit inside the carrying bag.

The Floor Top Carpet provides enhanced boot traction when used in ice and snow conditions and helps protect the inflatable floor from punctures and abrasions.